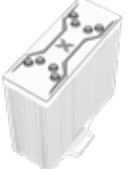 
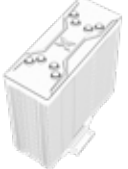 





















# AIR-KILLER Series

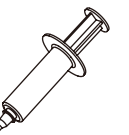 CPU Air Cooler User Manual  
AIR-KILLER 系列CPU散熱器說明書








## AIR-KILLER Series Accessories


1 Air-Killer Pro CPU Air Cooler Air-Killer Pro CPU空冷散熱器 	2 Air-Killer & Air-Killer S CPU Air Cooler Air-Killer & Air-Killer S CPU空冷散熱器 	3 120mm X22 PWM Fan 120mm X22 PWM風扇 
4 AMD Cooler Base Mounting Bracket AMD散熱器底座固定支架 	5 Intel 1700/1200/115x Cooler Base Mounting Bracket Intel 1700/1200/115x散熱器底座固定架 	6 Intel 2011 / 2066 Cooler Base Mounting Bracket 散熱器底座固定支架 
7 Intel/AMD Mounting Bracket Screw Intel/AMD 固定支架螺絲  <b>X4</b>	8 Intel Reinforced Plastic Steel Backplate Intel強化塑鋼背板 	9 Thermal Paste 散熱膏 
10 Mini ARGB LED Controller 迷你ARGB LED控制器 	11 Metal Wire Fan Mounting Clips 金屬風扇安裝鐵絲扣  <b>X4</b>	

### LGA 115X/1200/1700

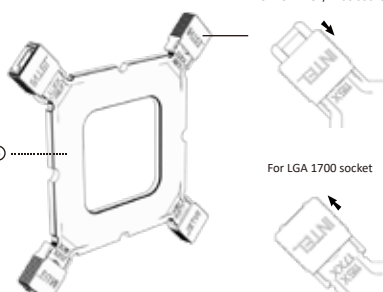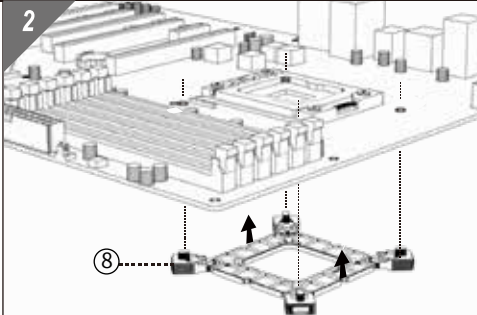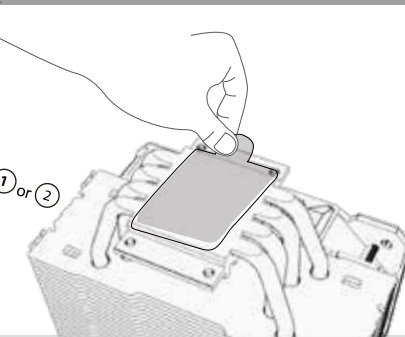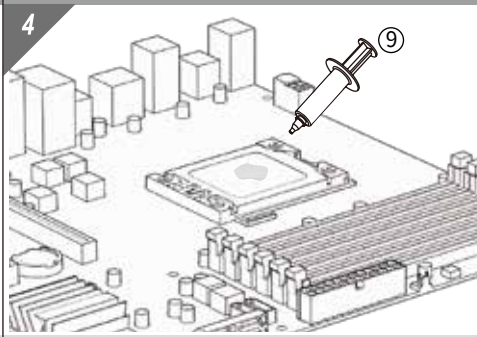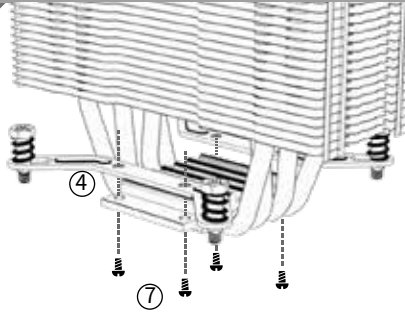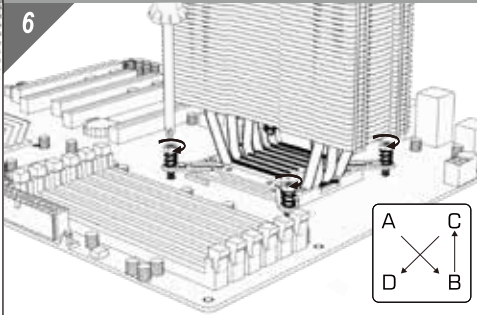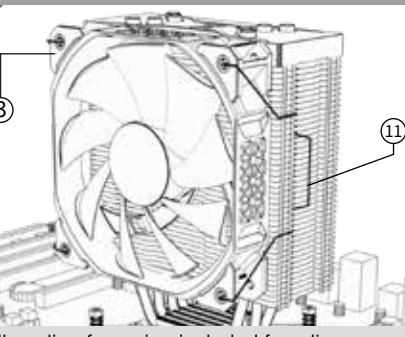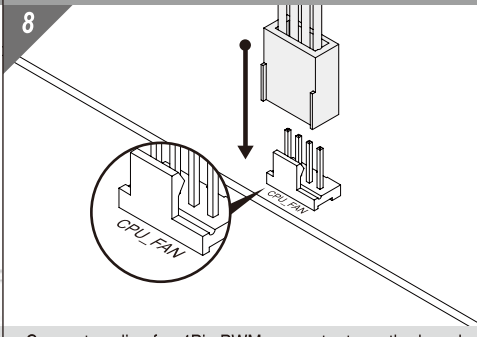        1  For LGA 115x/1200 socket For LGA 1700 socket Slide the plastic clips to Intel LGA115x/1200 or 1700 backplate mounting holes 將塑膠套滑動至LGA115x/1200 or 1700背板固定孔位	2  1. Make sure the screw bolt is lock in on the backplate. 2. Install the backplate to motherboard. 1. 請確認螺桿有正確鎖定在強化背板上 2. 安裝強化背板對準主機板安裝孔
3  Remove cooler base protective film. 移除散熱器底座保護膜	4  1. Clean the CPU surface. 2. Apply and spread the thermal paste to CPU evenly 1. 清潔CPU表面 2. CPU表面擠適量散熱膏，塗抹均勻
5  Install the Intel cooler base mounting brackets. 安裝Intel散熱器底座固定支架	6  Screw in the spring screw pillar to complete the air cooler and motherboard installation 對準背板螺絲孔位，使用彈簧螺絲完成散熱器安裝
7  Install cooling fan using included fan clips. 安裝散熱風扇	8  Connect cooling fan 4Pin PWM connector to motherboard CPU Fan socket. 連接散熱風扇4Pin PWM接頭到主機板CPU Fan孔位


### AMD AM3/AM4

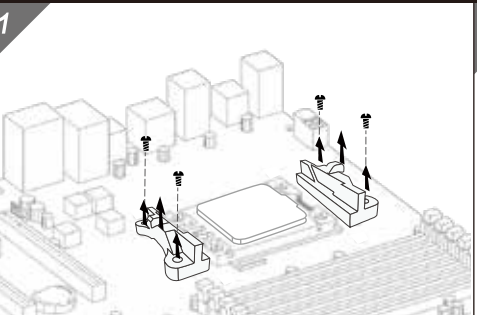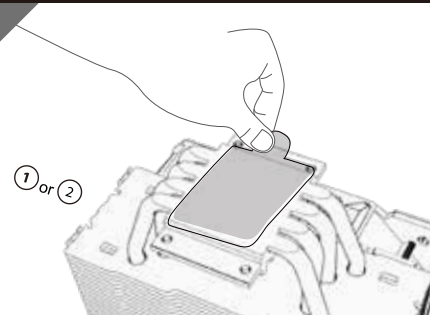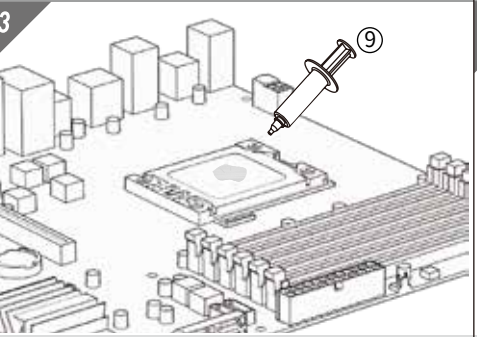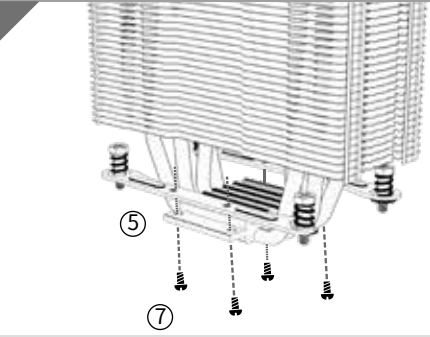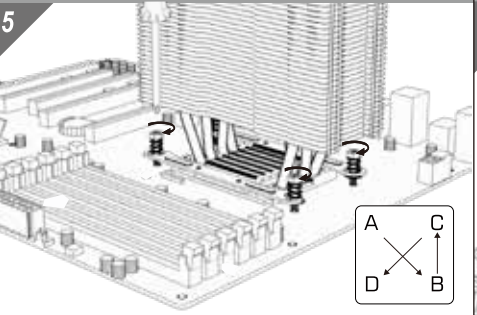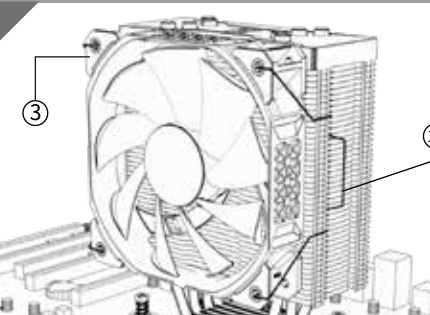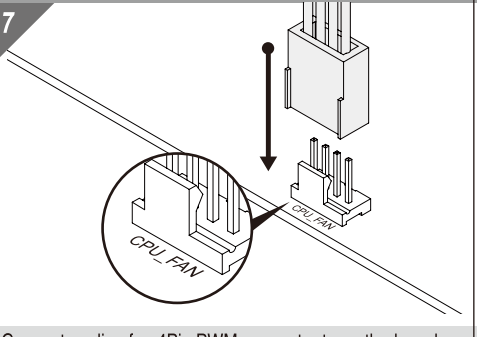1  Remove screws and bracket holders 移除螺絲及固定支架	2  Remove cooler base protective film. 移除散熱器底座保護膜
3  1. Clean the CPU surface. 2. Apply and spread the thermal paste to CPU evenly 1. 清潔CPU表面 2. CPU表面擠適量散熱膏，塗抹均勻	4  Install the AMD cooler base mounting brackets. 安裝AMD散熱器底座固定支架
5  Screw in the spring screw pillar to complete the air cooler and motherboard installation 對準背板螺絲孔位，使用彈簧螺絲完成散熱器安裝	6  Install cooling fan using included fan clips. 安裝散熱風扇
7  Connect cooling fan 4Pin PWM connector to motherboard CPU Fan socket. 連接散熱風扇4Pin PWM接頭到主機板CPU Fan孔位	

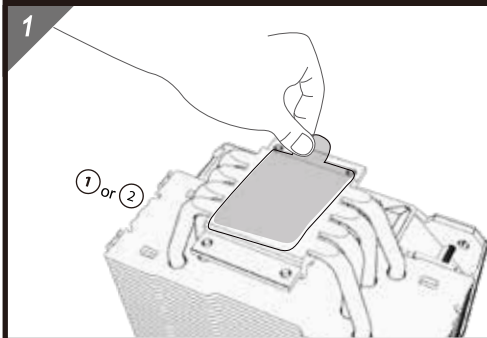


Remove cooler base protective film.

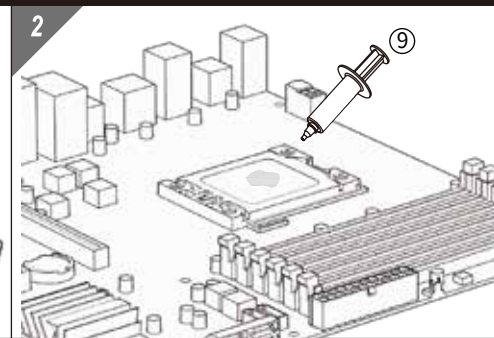移除散熱器底座保護膜




1. Clean the CPU surface.  
2. Apply and spread the thermal paste to CPU evenly

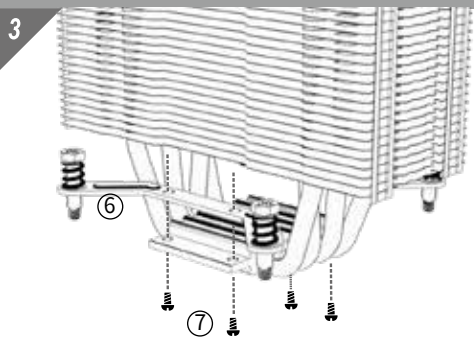1. 清潔CPU表面  
2. CPU表面擠適量散熱膏，塗抹均勻




Install the Intel 2011/2066 cooler base mounting brackets.

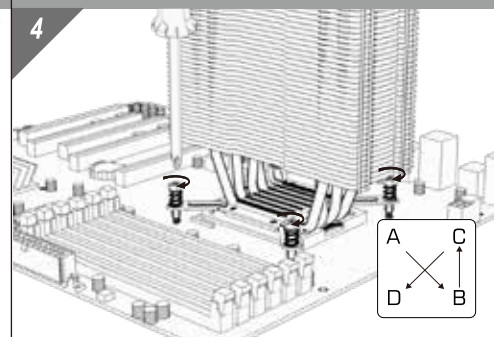安裝Intel 2011/2066散熱器底座固定支架




Screw in the spring screw pillar to complete the air cooler and motherboard installation

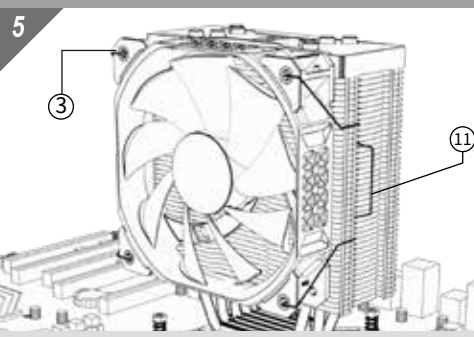對準背板螺絲孔位，使用彈簧螺絲完成散熱器安裝



Install cooling fan using included fan clips.


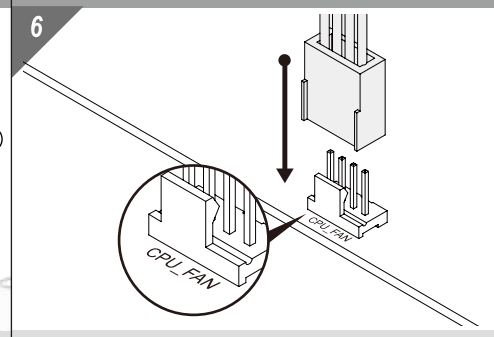
安裝散熱風扇



Connect cooling fan 4Pin PWM connector to motherboard CPU Fan socket.

連接散熱風扇4Pin PWM接頭到主機板CPU Fan孔位

## Cooling Fan Installation

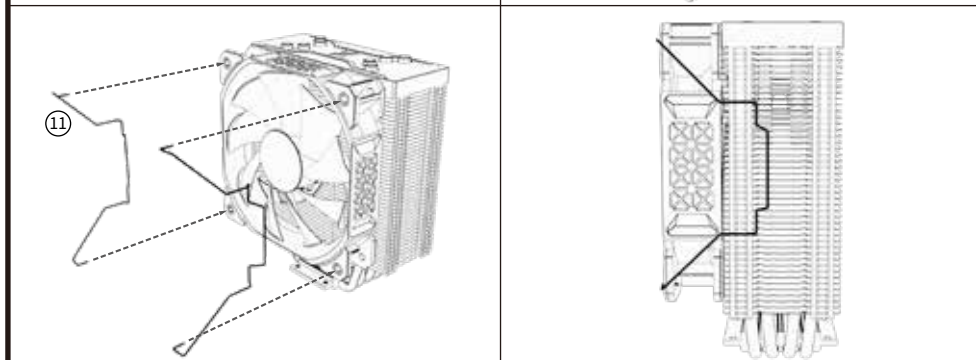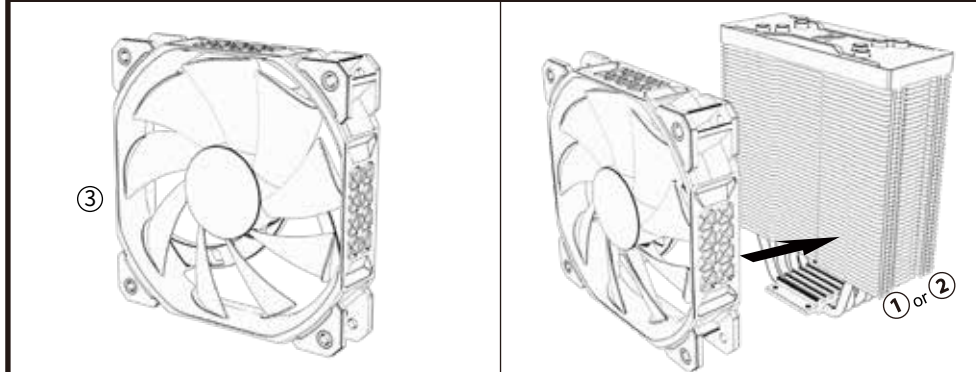


Clip the cooling fan to the heat sink, repeat again for the second fan to complete dual fan installation (the second fan is not included).

使用鐵絲扣具安裝風扇，重複相同步驟安裝另一側風扇(第二顆風扇另購)

## ARGB Connector Instruction (AIR-KILLER PRO Only) ARGB 連接使用說明(僅限AIR-KILLER PRO)
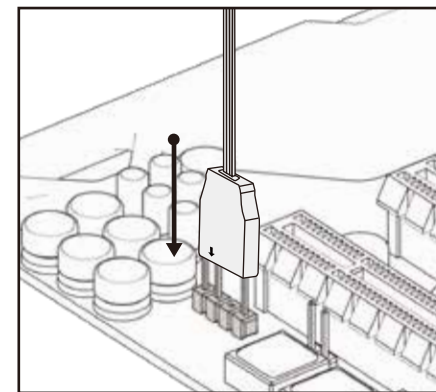
### ● ARGB Mother SYNC Mode

Please connect the 3pin ARGB connector to ARGB Motherboard, plug and auto switch to ARGB Motherboard SYNC mode.




### ● ARGB主機板同步模式

將 3pin ARGB 插入至主機板ARGB 針腳並自動同步模式

### ● Mini ARGB LED Controller Mode

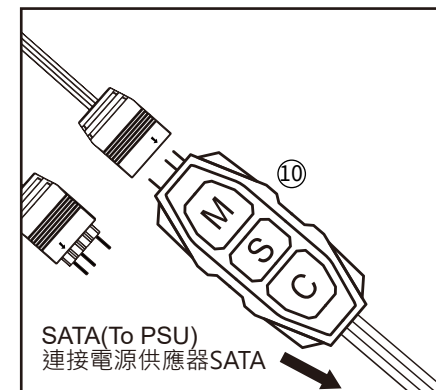Please connect the 3pin ARGB connector to Mini ARGB LED Controller, plug and play.



### ● 迷你 ARGB 控制器模式

將 3pin ARGB 連接頭插入迷你控制器並運作

## Mini ARGB LED Controller Instruction (AIR-KILLER PRO Only) 迷你ARGB控制器使用說明ARGB (僅限AIR-KILLER PRO)



### Multiple Lighting Effect Mode

多樣化燈效模式

Click M Button to Switch Different LED Lighting Effects (9 Lighting Effects)

單擊M按鈕切換不同燈效模式 (9種燈效模式)



### LED Speed Adjustment

LED 燈效速度調整

Click M button to Enter Multiple Lighting Effect Mode

Click S Button to Change LED Speed

(5 LED Speeds Available)

單擊M按鈕進入多樣化燈效模式

單擊S按鈕切換LED燈效速度 (5種LED燈效速度選擇)



### LED On/Off

LED 燈光開關

Click S Button and Hold More than 2 Seconds for LED Off

Click M or C Button for LED On

長按S按鈕2秒鐘開燈

單擊M或C按鈕開燈



### LED Single Color Mode

LED 單色模式

Click C Button to Switch Different LED Single Color

(7 Colors Available)

單擊C按鈕切換單一顏色LED燈效 (7種顏色選擇)



### LED Brightness Adjustment

LED亮度調整

Click C Button to Enter LED Single Color Mode

Click S Button to Adjust LED Brightness

(4 Brightness Modes)

單擊C按鈕進入LED亮度調整模式

(僅提供單一LED燈效模式使用)

單擊S按鈕調整LED亮度 (4種亮度模式)

**XIGMATEK**

www.xigmatek.com

E-mail: sales@xigmatek.com

XIGMATEK is Registered Trademark of Xigmatek Co., LTD.

Copyright © 2023-2027 All Rights Reserved